



GAME CLOCK OPERATION GUIDE

STARTING THE SCOREBOARD

- **Turn on scoreboard:** Press [GAME TIME] once.
 - **Clear previous game:** Press [GAME TIME] twice.
-

SETTING GAME TIME

- **Start a new game:** Press [GAME TIME] repeatedly until your desired **Warm-Up time** appears.
 - **Set a custom game time:** Press [GAME TIME], enter **1–99 minutes**, then press [ENTER].
 - **Change period time:** Press [TIME], enter **minutes:seconds** or **0**, then press [ENTER].
-

RUNNING THE CLOCK

- **Start/Stop clock:** Press [STOP/GO] (also used for curfew warm-up).
 - **Start intermission or warm-up:** Press [INTERM/WARM UP], enter **minutes** or **0**, then press [ENTER].
 - The horn will sound automatically at the end.
-

SCORING AND SHOTS

- **Add score:**
 - Home: [HSC]
 - Visitor: [VSC]
 - **Add shot:**
 - Home: [HSH]
 - Visitor: [VSH]
 - **Adjust score or shots manually:** Press [HSC] or [VSC], enter new total (0–99), then [ENTER].
-

PENALTIES

- **Set 2-minute penalty:** Press [HOME PENALTY] or [VISITOR PENALTY], then [ENTER] [ENTER].
 - **Set 4-, 5-, or 7-minute penalty:** Press [HPEN] or [VPEN], then [TIME], repeat [ENTER] [ENTER].
 - **Add player number:** Enter **1–99** before pressing the second [ENTER].
 - **Note:** The *shortest* penalty automatically cancels when the opposing team scores.
 - To **keep** the penalty active, press [ENTER] while it's flashing.
 - **Correct or clear a penalty:** Press [HPEN] or [VPEN], then [1] or [2], followed by [TIME] **minutes:seconds** or **0**, then [ENTER] [ENTER].
 - **Hold penalty clock in run time:** Press [PENALTY STOP/GO] to pause or resume penalty timing.
-

TIMEOUTS

- **Start a timeout (clock stopped):** Press [TIME], then [HSC] or [VSC], enter **1–59 seconds**, then [ENTER].
-

VIEWING OR ADJUSTING TIMES

- **Show time of goal or penalty (clock stopped):** Press [TIME OF] – displays on main clock for 5 seconds.
 - **Go to or from time of day:** Press [TIME] [ENTER] at any time (even during game time).
-

END OF PERIOD / INTERMISSION

- When a period ends, the **period indicator advances** and **game time resets** to the start time automatically.
-

HORN SETTINGS

- **Set interval horn:** Press [TIME] [HORN], enter **1–9 minutes** or **10–1:59 seconds**, then [ENTER].
 - **Cancel interval horn:** Press [TIME] [HORN] [0] [ENTER].
 - The horn can also be cancelled by pressing [GAME TIME].
-

FIXING MISTAKES

- **Undo last action:** Press [ENTER] [0] [ENTER] to return to the last [STOP] setting.
-

Tip: Keep a printed copy of this guide near the timekeeper's box for quick reference during games.