To Set Period Time

SET TIME 2 0


YES PERIOD **Then a number key to set value - ex. 1**

When setting a time under ten minutes, you must enter zero first - ex. 05

To Set Score/Goal Shots

HOME SCORE or GUEST SCORE SHIFT **Press 1 on keypad**

GOAL SHOTS or GOAL SHOTS **Press 1 on keypad**

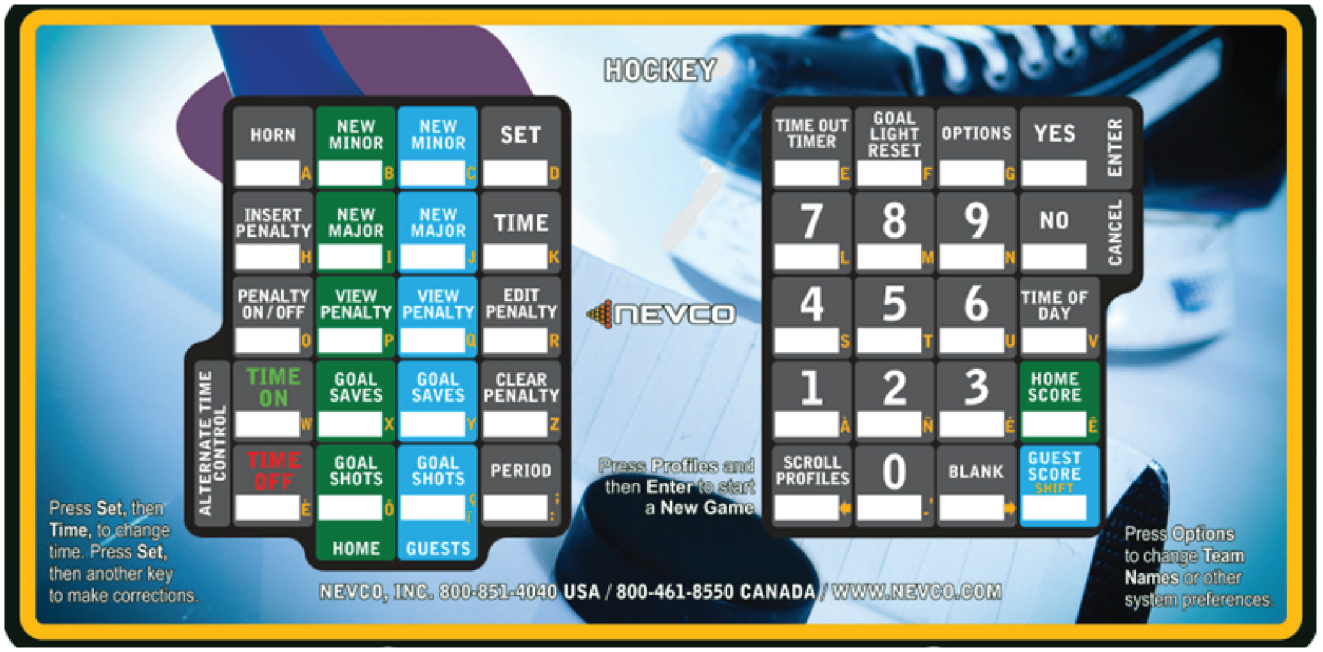

START UP

- Turn Control on, switch is located on the right-hand side.
- Press SCROLL PROFILES until the desired one appears 1-HOCKEY, 2-SJHL, 3-MINORHOCKEY, & 4-U7 AND U9. Press YES.
- Hand held switch is to control time, right is time on, and left is time off. (If there is an issue with the hand held switch, to enable the TIME ON & TIME OFF keys, turn the control power off, disconnect the hand held switch, and restart the control)
- **End of game return scoreboard to time of day, press TIME OF DAY.**

To Set A Penalty

NEW MINOR or NEW MINOR

Enter the player number, then YES. Display will read TIME: MM:SS, hit YES again for 2:00 minutes. Or enter 02:00, then YES.
For a Major, press NEW MAJOR and the default is 5:00.

To Clear A Penalty

Press VIEW PENALTY or VIEW PENALTY until the desired penalty is displayed on controller.

Press CLEAR PENALTY

To Set A Time Out

When the clock is not running press




Press 1 on keypad

To Correct An Error



Use ahead of a function key to directly enter a value, set times, and correct errors.

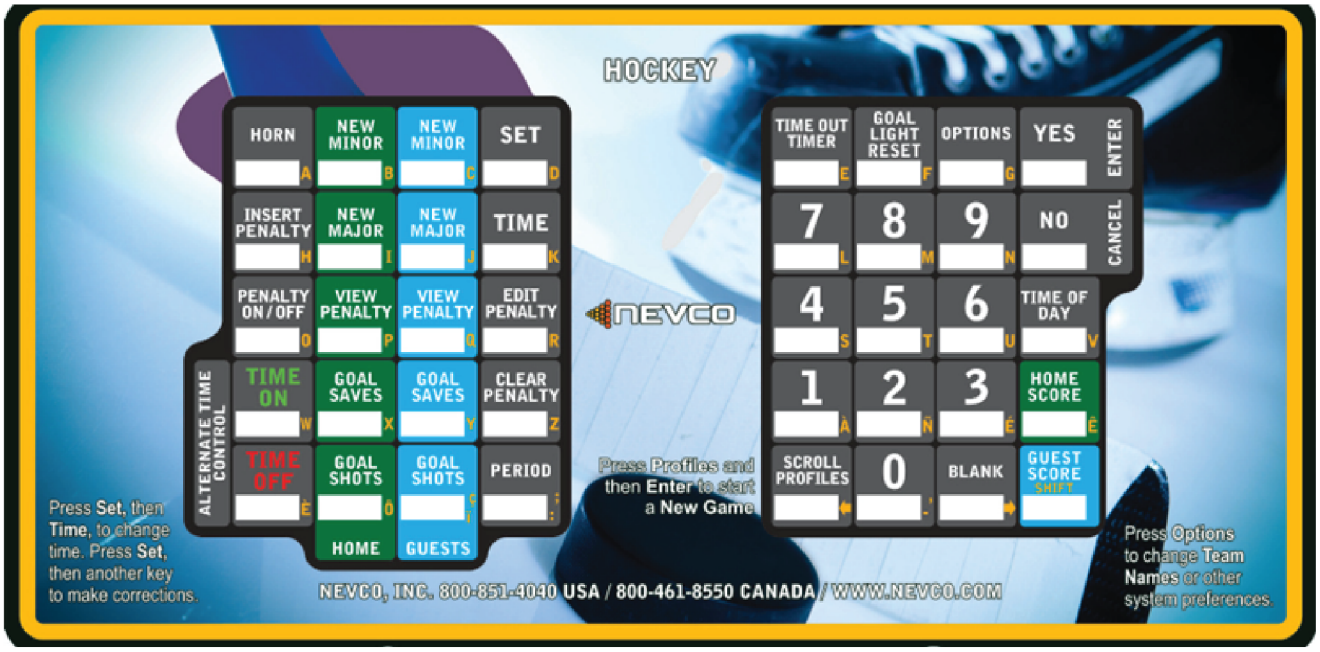

If further instructions are needed, please refer to the folder labelled Operator's Instructions MPCW-7 Control, or MMHA website.